




Ballito Airfield
Ballito Box / Corridor - Entry and Exit

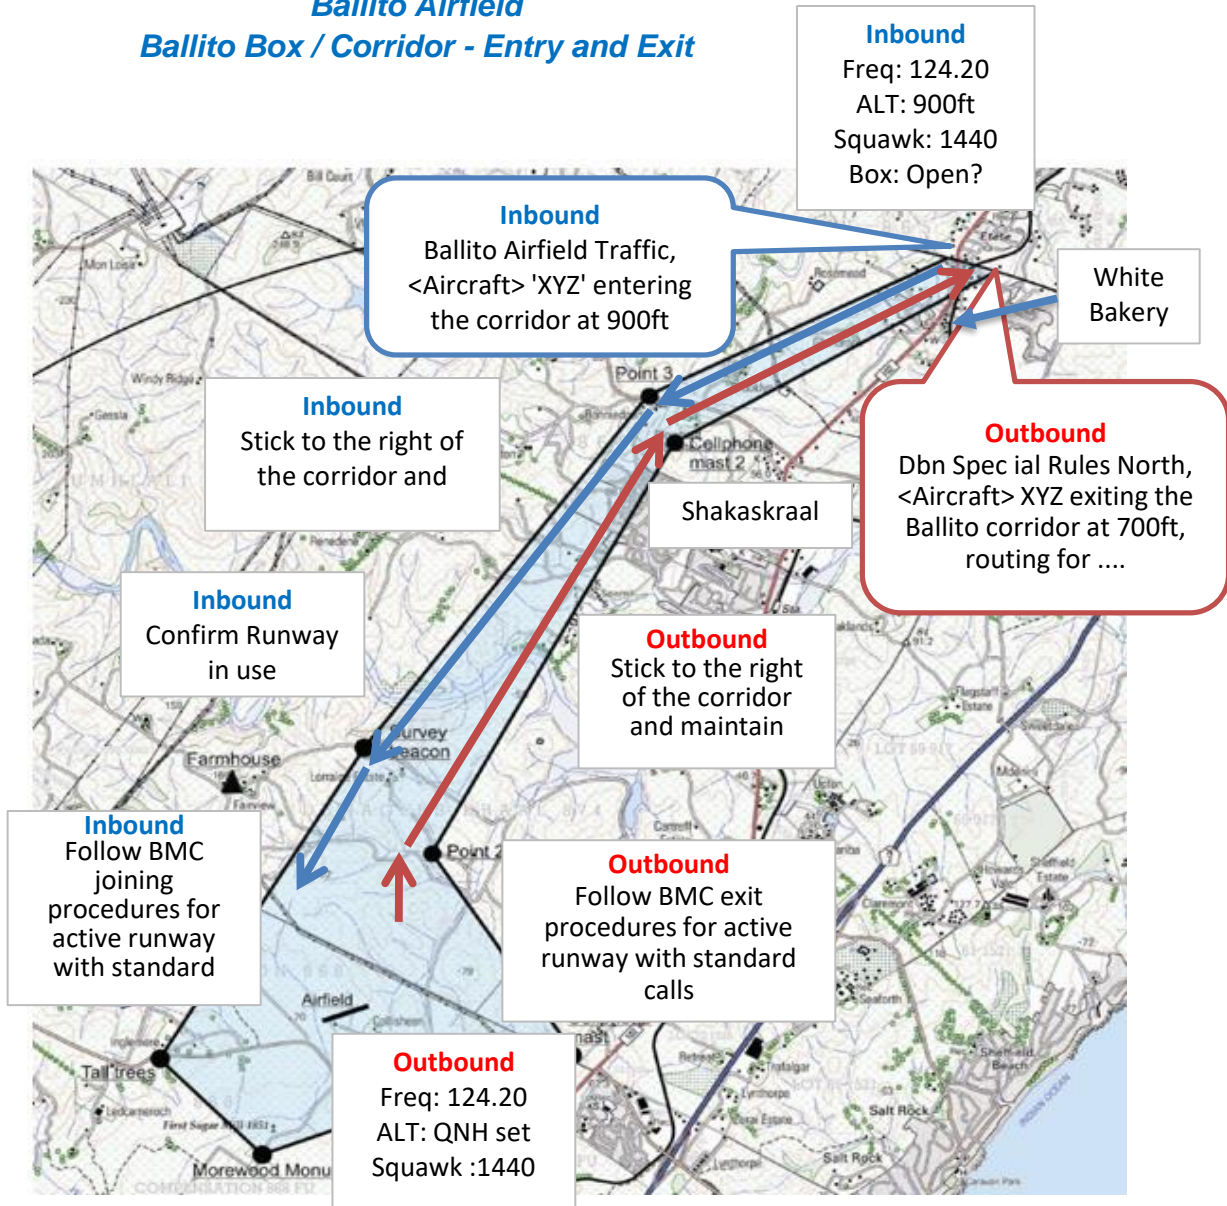


Ballito Airfield Special VFR Flight Box and Corridor - GPS Coordinates

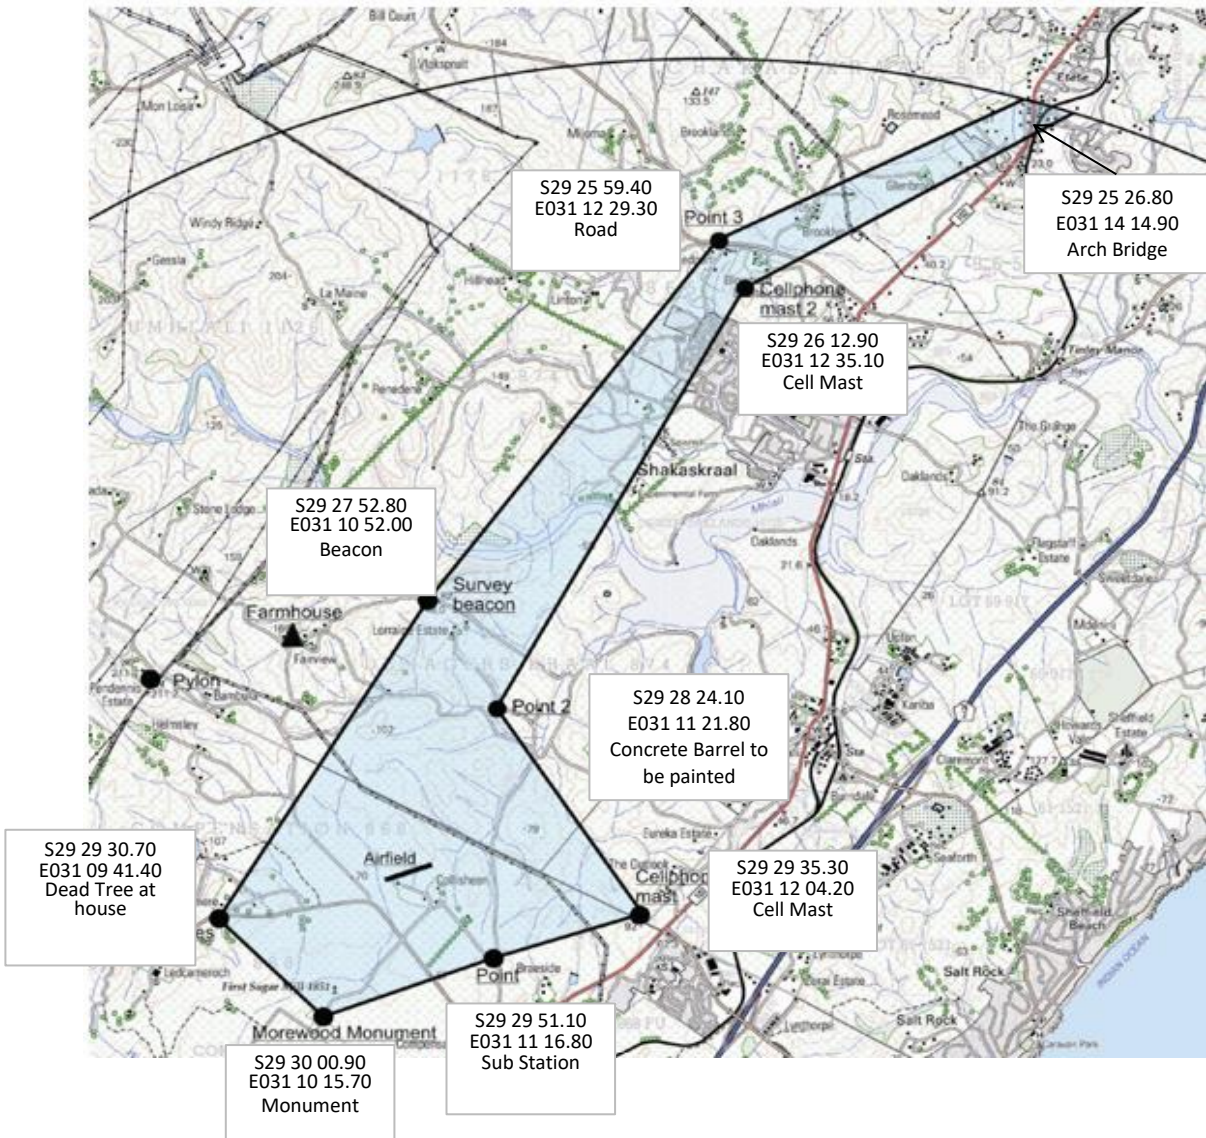


Ballito Airfield Joining and Exiting - Runway 08 (LH)

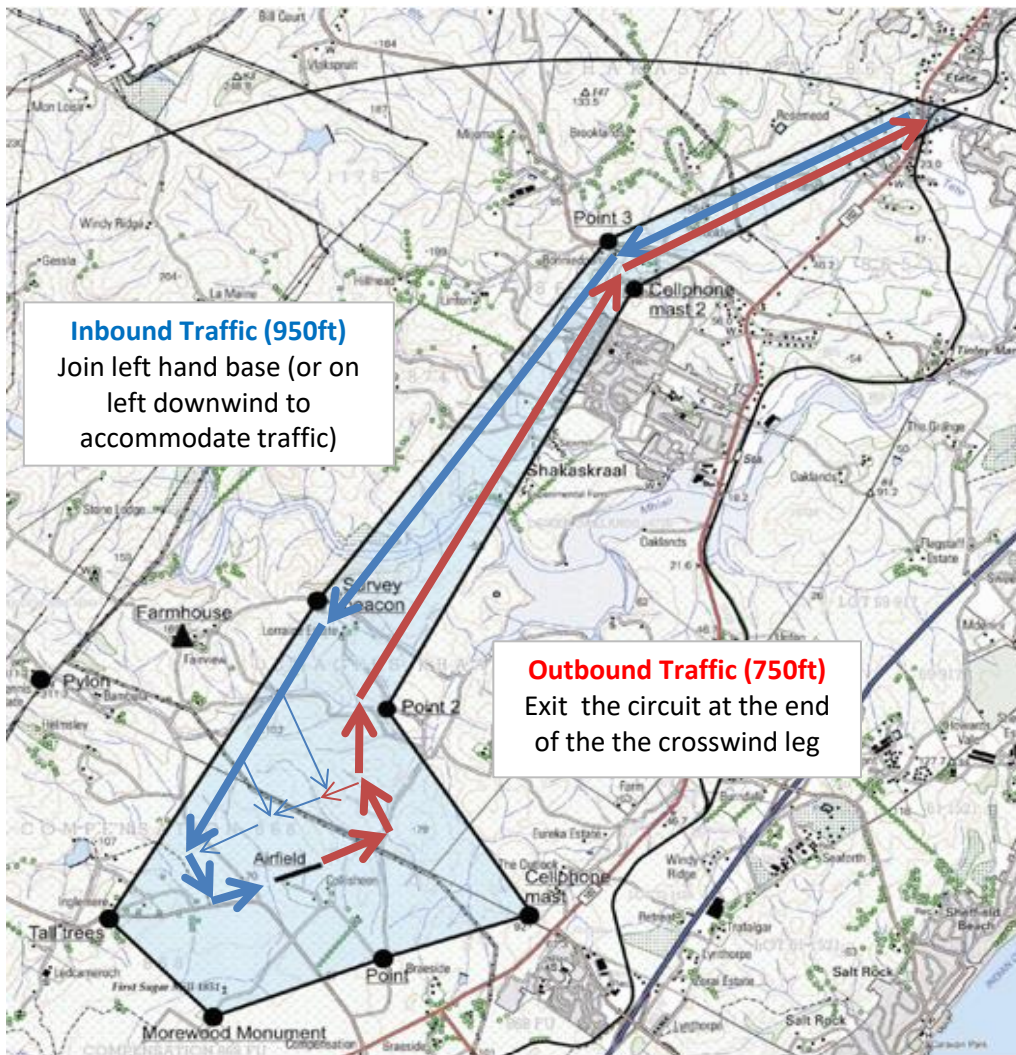


Ballito Airfield
Joining and Exiting - Runway 26 (RH)

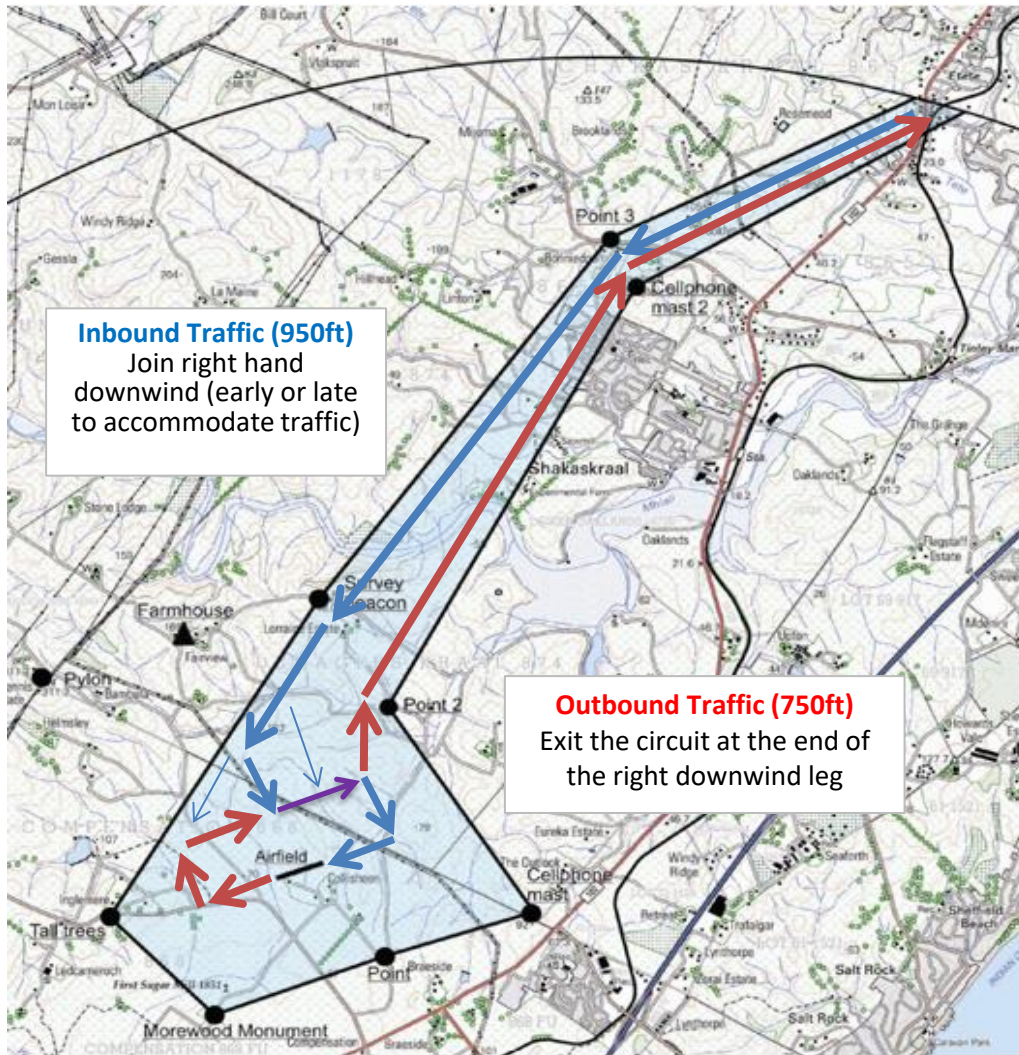

Ballito Airfield
Joining and Exiting - Runway 18 (RH)

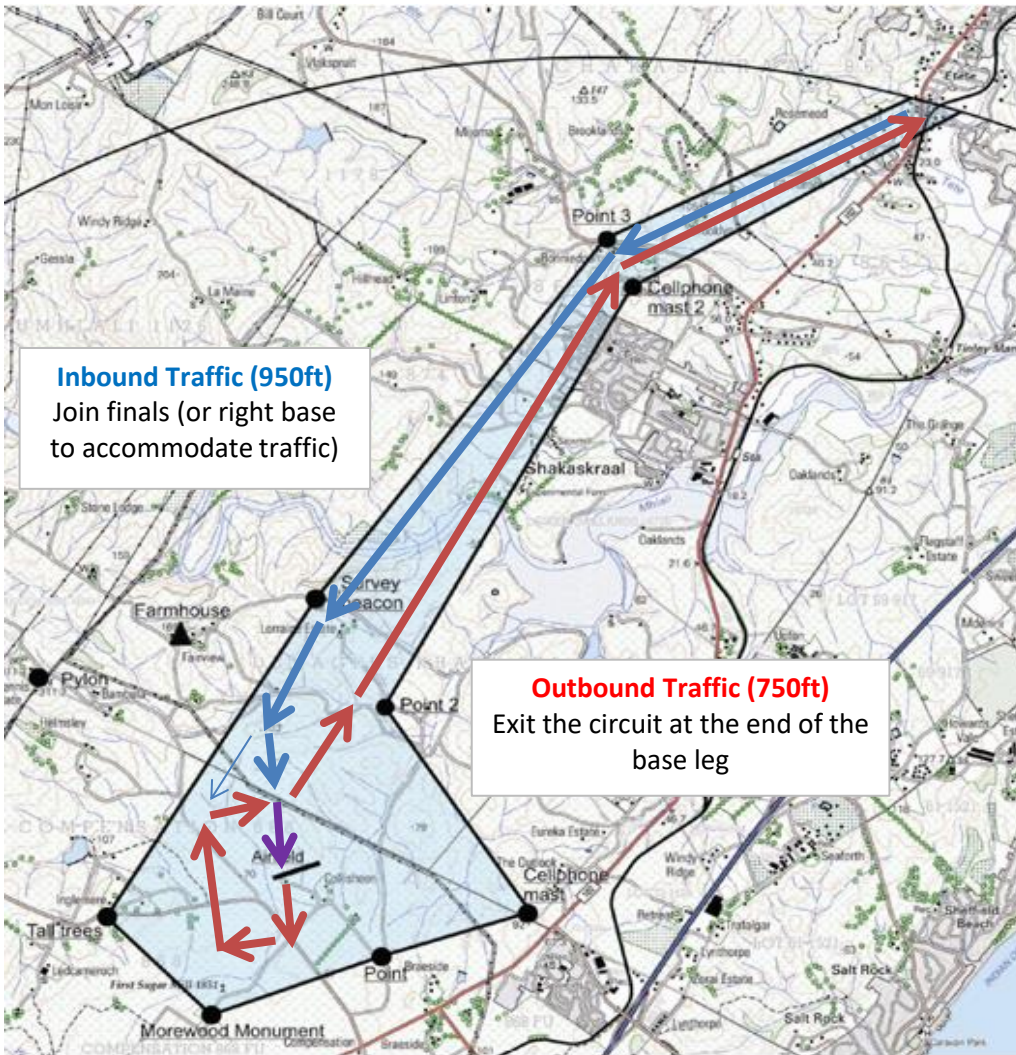

Ballito Airfield
Joining and Exiting - Runway 36 (LH)

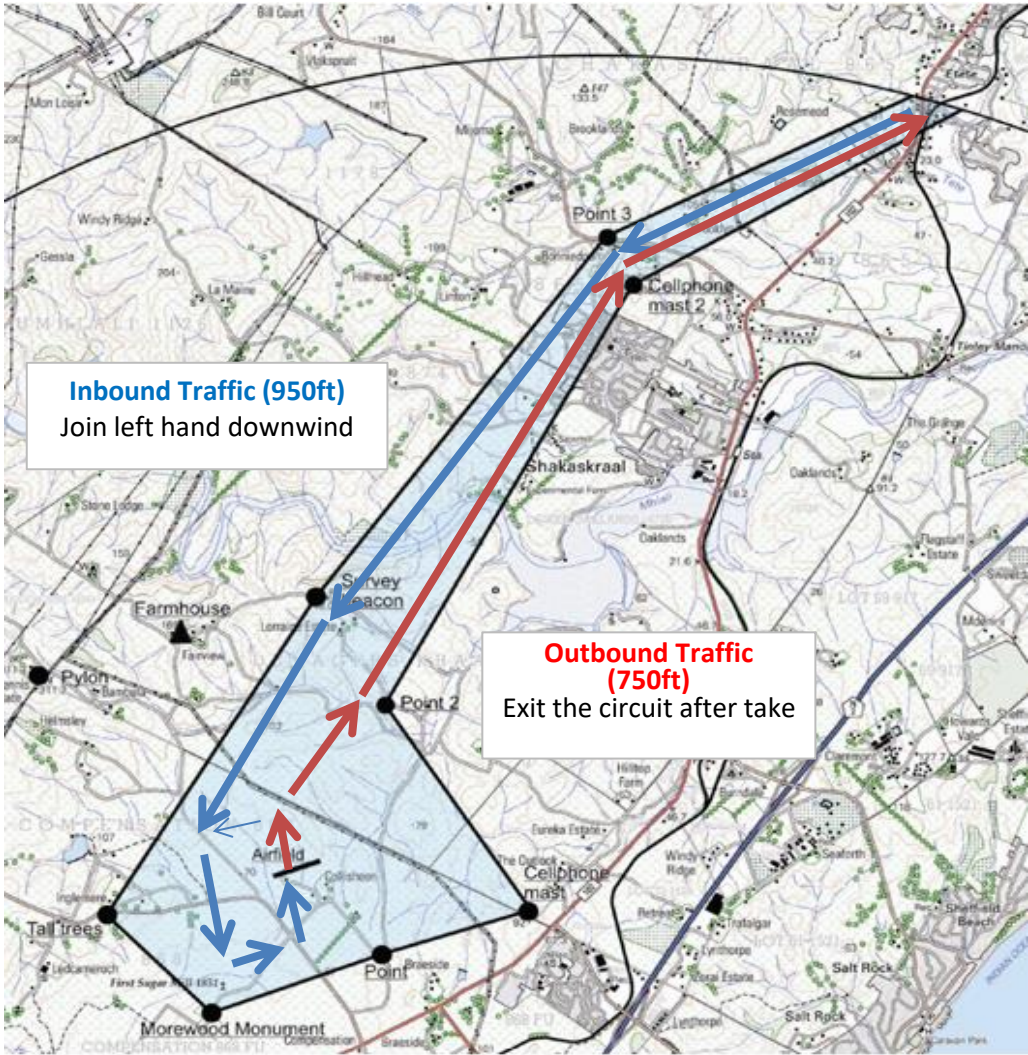

Ballito Airfield

General Inbound and Outbound Procedures

Right of way

Traffic on finals and landing has absolute right of way

Traffic on any leg in the circuit has automatic right of way to the next leg

Traffic on	Has right of way for the
Take off	Crosswind
Crosswind	Early Downwind
Early Downwind	Late Downwind
Late Downwind	Base
Base	Finals
Finals	Landing

Traffic converging to your right has the right of way

The lower inbound aircraft has the right of way

Outbound Notes

Include in after start checks:, Transponder to GND/STDBY, confirm set to 1440

On entering runway: "Ballito airfield, Microlight BMC entering and backtracking runway XX"

Include in pretake off checks: Transponder set to ALT, confirm squawking 1440

On Take off: "Ballito airfield, Microlight BMC airborne XX for circuits/outbound"

On heading out: "Ballito airfield, Microlight BMC leaving the circuit"

On exiting the box: "Durban Special Rules North, Microlight BMC exiting the Ballito Box @ 750ft, routing for"


Inbound Traffic

Before entering the Box, ensure transponder on ALT and squawking 1440 and that the Box is open

On entering the box: "Ballito airfield, microlight BMC entering the Box @ 950ft"

On reaching the survey beacon: "Ballito airfield, Microlight BMC, inbound, 950ft abeam the survey beacon to join left/right downwind/base/finals runway XX"

Normal joining and landing procedures thereafter

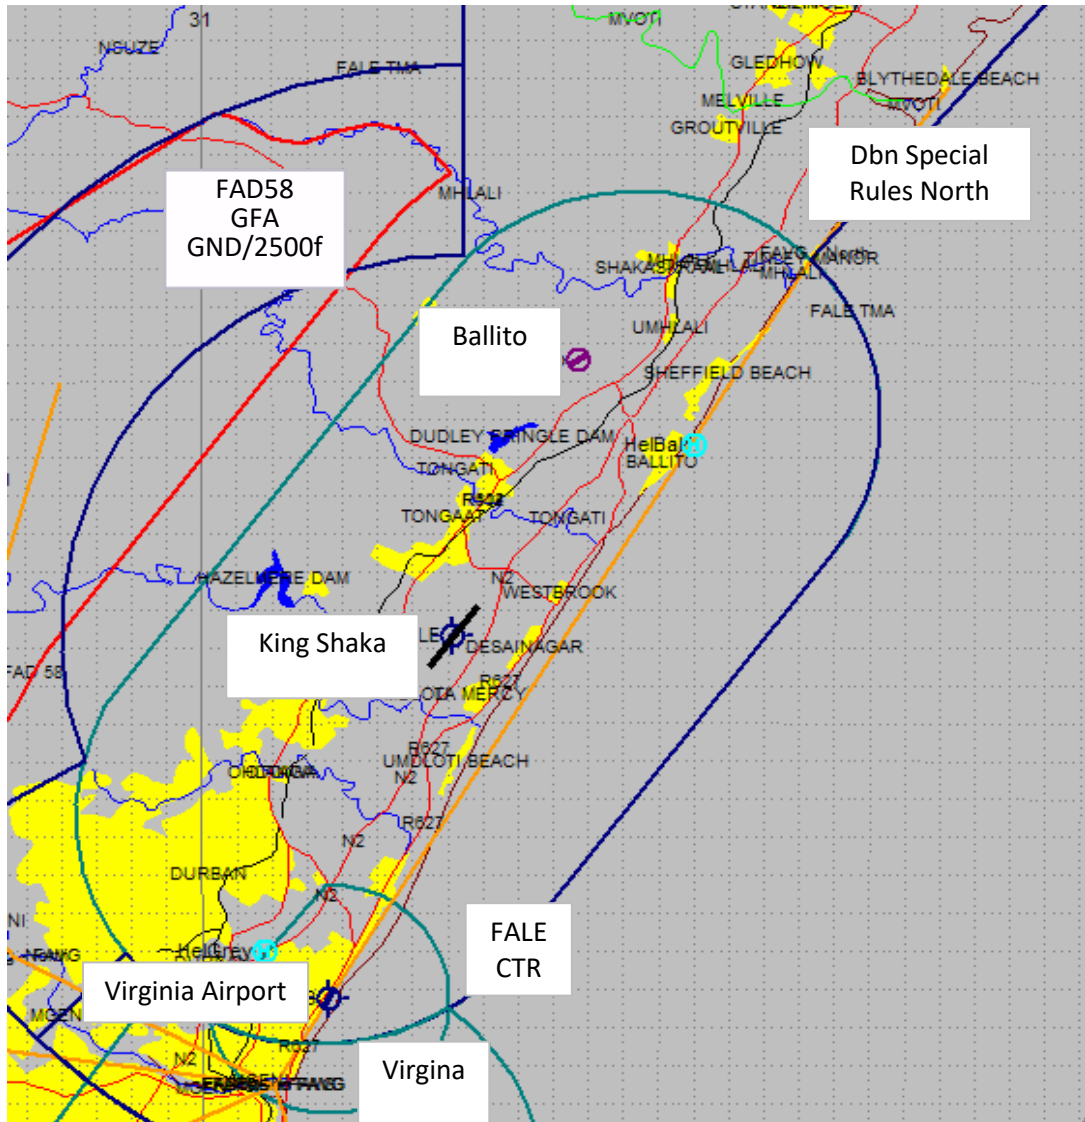

Name	Lat	Lon
Mount Morewood	S293000.64144	E0311012.94565
Tall Trees	S292931.48871	E0310937.12166
Survey Beacon	S292753.50	E0311052.17
Point3	S292557.62	E0311227.98
WestExit	S292512.63	E0311414.80
EastExit	S292517.28	E0311432.64
CellPhoneMast2	S292611.99	E0311236.86
Point2	S292827.19	E0311113.64
CellPhoneMast	S292936.70972	E0311204.51304
Point	S292948.96	E0311112.00

